


## Stop/Taillight Bulb

1. Remove the seat (page 42).
2. Turn the socket (1) 90° counterclockwise, then pull it out toward you.
3. Pull out the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

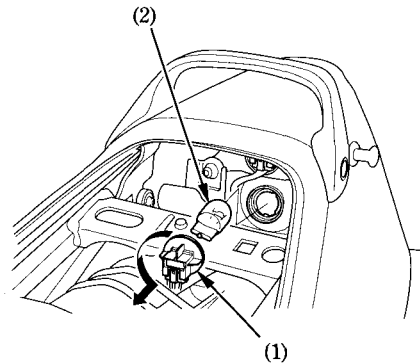

- (1) Socket  
(2) Bulb