

REAR WHEEL/SUSPENSION

Check the chain slider for wear or damage.
Remove the screw, collar and chain slider.



Check the rubber bushings for wear, damage or fatigue.



ASSEMBLY

