

FUEL METER/FUEL UNIT

FUEL METER INSPECTION

Remove the fuel tank (page 5-3).

Disconnect the fuel unit 3P connector.




Connect the jumper wire between the Yellow/White and Green wire terminals of the wire harness side. Turn the ignition switch "ON" and make sure that the fuel meter needle swings to "FULL".

Connect the jumper wire between the Blue/White and Green wire terminals of the wire harness side. Fuel meter is in good condition if the needle returns to "EMPTY".


CAUTION:

Do not leave the terminals connected with the jumper wire for a long time, as it causes damage to the fuel meter.

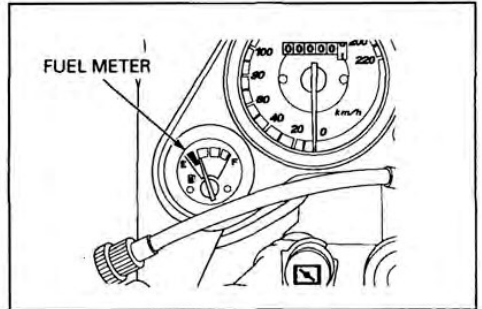

FUEL UNIT INSPECTION

Disconnect the fuel unit 3P connector.

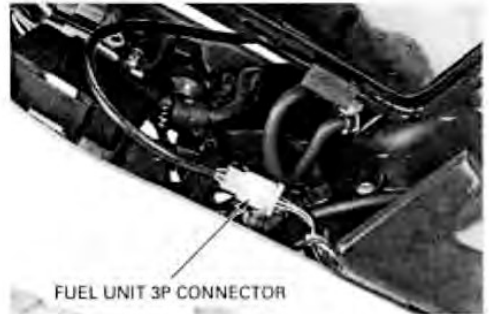

Remove the four nuts and fuel unit.

CAUTION:

- Be careful not to damage the unit cable.
- Be careful not to bent the float arm of the unit.

