

# MAINTENANCE

page

|           |   |
|-----------|---|
| <b>67</b> | <b>MAINTENANCE</b>                      |
| 67        | THE IMPORTANCE OF<br>MAINTENANCE        |
| 68        | MAINTENANCE SAFETY                      |
| 69        | SAFETY PRECAUTIONS                      |
| 70        | MAINTENANCE SCHEDULE                    |
| 73        | TOOL KIT                                |
| 74        | SERIAL NUMBERS                          |
| 76        | AIR CLEANER                             |
| 78        | CRANKCASE BREATHER                      |
| 79        | ENGINE OIL                              |
| 84        | THROTTLE OPERATION                      |
| 85        | COOLANT                                 |
| 86        | DRIVE CHAIN                             |
| 92        | DRIVE CHAIN SLIDER                      |
| 93        | FRONT AND REAR SUSPENSION<br>INSPECTION |
| 94        | SIDE STAND                              |
| 95        | WHEEL REMOVAL                           |
| 100       | BRAKE PAD WEAR                          |

page

|            |  |
|------------|--|
| 102        | BATTERY                                  |
| 104        | FUSE REPLACEMENT                         |
| 108        | BRAKELIGHT SWITCH<br>ADJUSTMENT          |
| 109        | BULB REPLACEMENT                         |
| <b>115</b> | <b>CLEANING</b>                          |
| <b>119</b> | <b>STORAGE GUIDE</b>                     |
| 119        | STORAGE                                  |
| 121        | REMOVAL FROM STORAGE                     |
| <b>122</b> | <b>TAKING CARE OF THE<br/>UNEXPECTED</b> |
| <b>123</b> | <b>SPECIFICATIONS</b>                    |
| <b>127</b> | <b>CATALYTIC CONVERTER</b>               |