


SEAT

Rear seat

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3). Turn it clockwise, then pull the rear seat up and back.

To install the rear seat, insert the prongs (4) into the rear stays (5) on the frame, and then push down on the rear of the rear seat.

Be sure the seat is locked securely in position after installation.

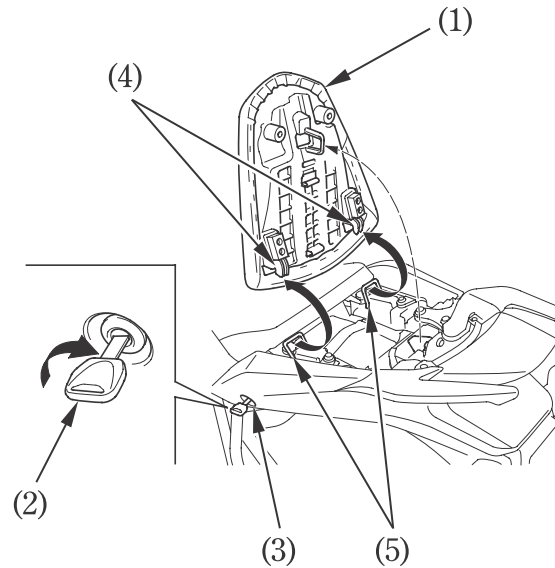

- (1) Rear seat
- (2) Ignition key
- (3) Seat lock

- (4) Prongs
- (5) Rear stays