


Electrical Trouble ▶ Burned-out Light Bulb

| Position Light Bulb

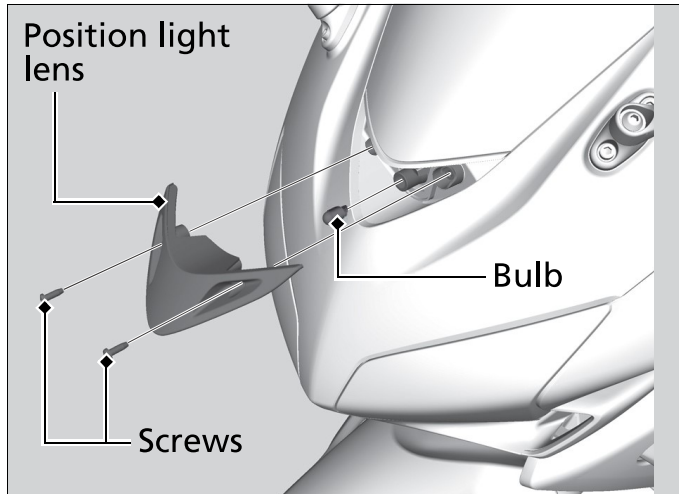

1. Remove the screws.
2. Remove the position light lens.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.