


Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold both the select button (2) and reset button (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

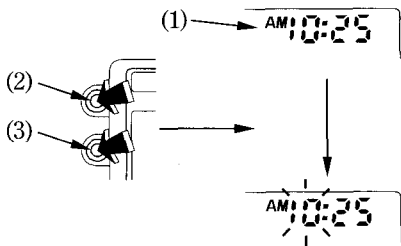

- (1) Digital clock
- (2) Select button
- (3) Reset button

3. To set the hour, press the reset button until the desired hour and AM/PM are displayed.

