
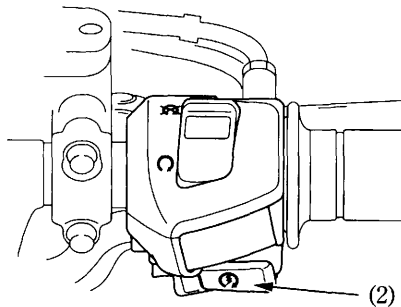


Start Button

The start button (2) is below the engine stop switch (1).

When the start button is pressed, the starter motor cranks the engine, the headlight will automatically go out, but the taillights will stay on. If the engine stop switch is in the  (OFF) position, the starter motor will not operate. See page 66 for the starting procedure.



(2) Start button