


## Position Light Bulb (Except U type)

1. Turn the position light socket (1) approximately 45° counterclockwise, then pull it out toward you.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

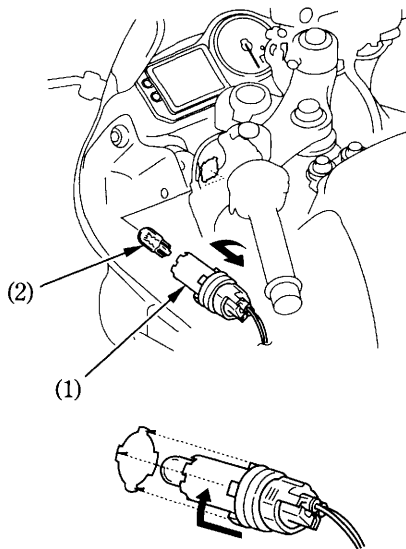

- (1) Position light socket  
(2) Bulb