


HEADLIGHT BEAM ADJUSTMENT

To adjust the headlight beam vertically,
remove the lid (See page 91) and turn the
knob (1), (2) in either direction.

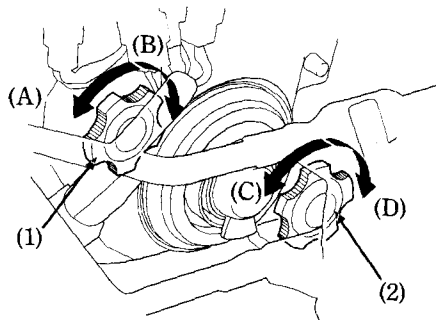

(A) Right
(B) Left

(C) Up
(D) Down