

SIDE COVER

To remove the right and left side covers (1), insert the ignition key or coin into the clip (2), turn in 90° clockwise so that the groove in the clip is level, pull out the prongs (3) and (5) and ribs (6) in the order listed and then gently pull the side cover. Remove the side cover.

NOTE:

* Be careful, not to break the prong (5).

 
NOTE:

* Use the groove (A) when the ignition key is used; use the groove (B) when a coin is used.

CLIP (2) IN LOCK



CLIP (2) IN UNLOCK



- (1) Side cover
- (2) Clip
- (3) Prongs
- (4) Seat cowl
- (5) Prong
- (6) Ribs

