


Installation Notes:

Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and when hub.

CAUTION:

- * **When installing the wheel, fit the left brake disc carefully between the brake pads to avoid damaging the pads.**

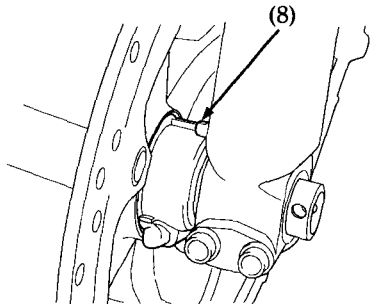

Position the lug on the speedometer gear box against the lug (8) on the left fork leg. Tighten the axle bolt to the specified torque .

Front axle torque :

60 N·m (6.0 kg-m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts, and tighten to a torque of :

27 N·m (2.7 kg-m , 20 lb-ft)

(8) Lug