

FUSE REPLACEMENT

(Refer to the maintenance precautions on page 63).

The main fuse (1), located on the starter magnetic switch behind the left side cover, is:


30A(Main fuse)

The spare main fuse (2) is located under the starter magnetic switch.

The fuse box (4) is located under the right upper shroud (5) on the upper fairing.

The specified fuse are:

10A and 15A

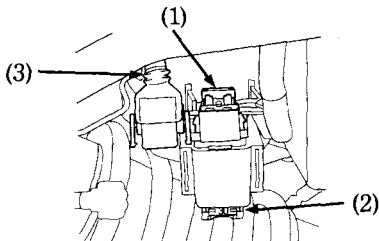


- (1) Main fuse (3) Wire connector
(2) Spare main fuse

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the left side cover, disconnect the wire connector (3) of the starter magnetic switch and pull out the oil fuse. Install a new fuse and reconnect the connector.

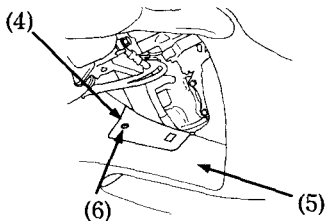

- (4) Fuse box (5) Right upper shroud
(6) Screw