

## **RIGHT HANDLEBAR CONTROLS** **<For AUSTRALIA only>**

### **Engine Stop Switch**

The engine stop switch (1) is next to the throttle grip. When the switch is in the RUN position, the engine will operate. When the switch is in the OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

#### **NOTE:**


- \* If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will still be on, resulting in battery discharge.

### **Starter Button**

The starter button (2) is below the engine stop switch (1).

Make sure that the transmission is in neutral and the clutch is disengaged.

When the starter button is pressed, the starter motor cranks the engine. See page 48 for the starting procedure.

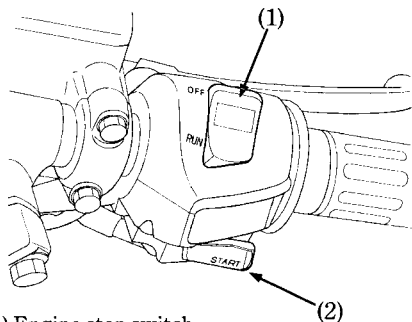

(1) Engine stop switch

(2) Starter button