


## MAINTENANCE LID/LOWER FAIRING

### Maintenance Lid

1. Turn the clips (2) 90° counterclockwise.
2. Pull the maintenance lid (1) out by releasing the tabs (3) from the fairing.

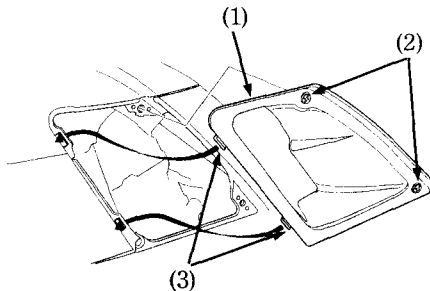

- (1) Maintenance lid
- (2) Clips
- (3) Tabs

### Lower Fairing

1. Remove the maintenance lid.
2. Pull the clips (7) out to the first detent position.
3. Remove the mount screw (5) and long mount screw (6) by holding the lower fairing (4).
4. Remove the right lower fairing by releasing the tabs (8) and prong (9).
5. Remove the lower fairing by releasing the retaining prong (9).