



3. Loosen the right and left axle pinch bolts (3), and remove the axle bolt (4).
4. Withdraw the front axle (5) and remove the front wheel.

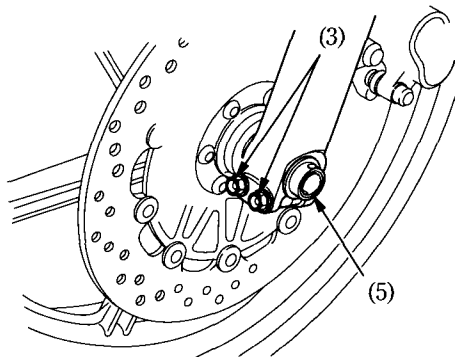

- (3) Axle pinch bolts
- (5) Front axle

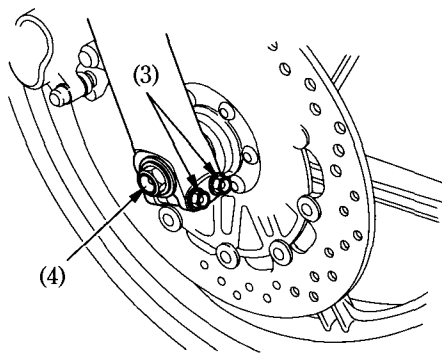

- (4) Axle bolt