


Fuse box:

The fuse box is located under the right upper shroud (1) on the upper fairing.

The specified fuses are:

10A, 15A

1. Remove the right upper shroud (1) by removing the screw (2).
2. Open the fuse box cover (3).
3. Pull out the old fuse and install a new fuse.
The spare fuses (4) are located in the fuse box.
4. Close the fuse box cover and install the right upper shroud.

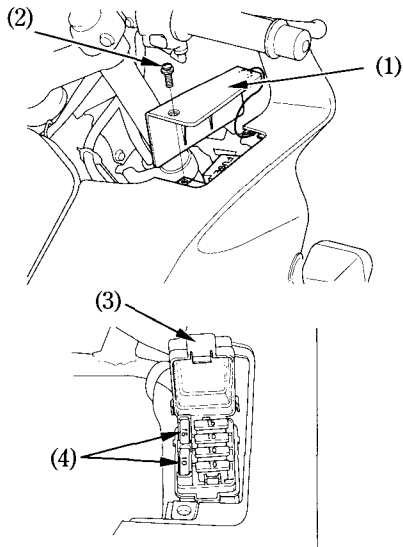

- | | |
|------------------------|--------------------|
| (1) Right upper shroud | (3) Fuse box cover |
| (2) Screw | (4) Spare fuses |