

INSTRUMENTS AND INDICATORS

The indicators are contained in the instrument panel. Their functions are described in the tables on the following pages.

- (1) Speedometer
- (2) Left turn signal indicator
- (3) High beam indicator
- (4) Tachometer
- (5) Tachometer red zone
- (6) Low oil pressure indicator
- (7) Right turn signal indicator
- (8) Immobilizer system indicator
(Except U, MX, BR type)
- (9) Coolant temperature gauge
- (10) Odometer/tripmeter display
- (11) Odometer/tripmeter
select and reset button
- (12) Fuel reserve indicator
- (13) Neutral indicator

