

INNER PANEL


The right and left inner panels can be removed in the same manner.

Removal:

1. Remove the bolts (1).
2. Remove the inner panels (2) from the hooks (3) of the front cowls (4).

Installation:

- Installation can be done in the reverse order of removal.

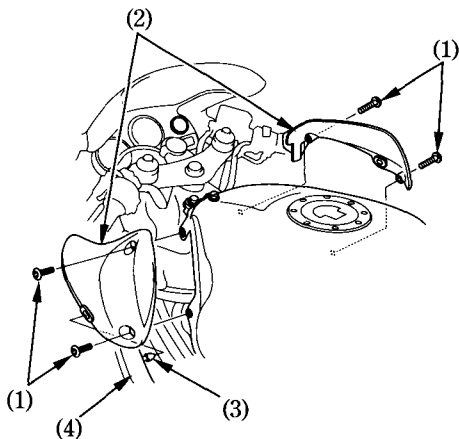

(1) Bolts

(2) Inner panels

(3) Hooks

(4) Front cowls