


FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.


The fuel tank does not require draining.

To raise:

1. Remove the inner panel (page 50).
2. Remove the two bolts (1) with washers.
3. Raise the front of the fuel tank (2) and place the 22mm box end wrench (3) between the fuel tank depression (4) and rear suspension joint (5).

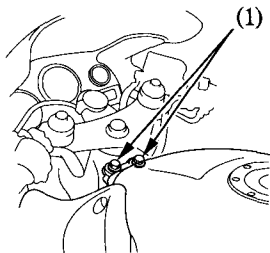

(1) Bolts

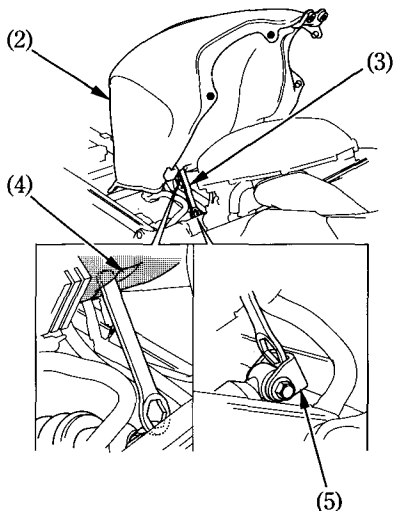

- (2) Fuel tank
- (3) 22 mm box end wrench
- (4) Fuel tank depression
- (5) Rear suspension joint