 



PGM-FI Indicator and Malfunction Indicator (MIL)

The PGM-FI indicator (1) and the red malfunction indicator (MIL) (2) lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system.

The PGM-FI indicator should also go on for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at \odot (RUN).

If the PGM-FI indicator and red malfunction indicator (MIL) lights at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.

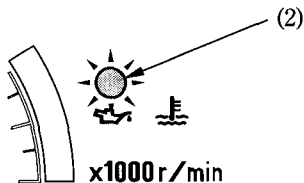

- (1) PGM-FI indicator
- (2) Red Malfunction indicator (MIL)