

Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

Speedometer

Shows riding speed.

Odometer

 
Shows accumulated mileage.

This meter can be displayed to 0 to 99,999 kilometers (miles). If the display exceeds 99,999 kilometers (miles), it will return to 0 automatically.

If you drive 100,000 kilometres (miles) or above and when the ignition switch is turned ON, number of the 6th digit is shown in the right end place of the odometer for 0.75 seconds after the initial display on the odometer. (That is number indicating hundreds thousands kilometres.) Then, the odometer returns to the ordinary display.



Example: the case of 123,000 km run.



- (1) Speedometer
- (2) Odometer
- (3) Tripmeter