

LOWER COWL


The lower cowl must be removed to service the spark plugs, to replace the oil filter, or to remove the middle cowl.

Removal:

1. Remove the bolts A (1), bolts B (2) and bolt C (3).
2. Remove the clips A (4) and clips B (5).

Installation:

- Installation can be done in the reverse order of removal.

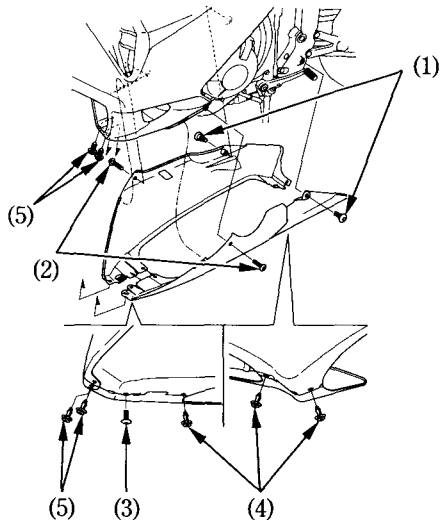

- | | |
|-------------|-------------|
| (1) Bolts A | (4) Clips A |
| (2) Bolts B | (5) Clips B |
| (3) Bolt C | |