


MIDDLE COWL

Removal:

The middle cowl must be removed to service the spark plugs or to replace the oil filter.

1. Remove the lower cowl (page 68).
2. Remove the bolts (1).
3. Remove the clips A (2).
4. Loosen the screws (3).

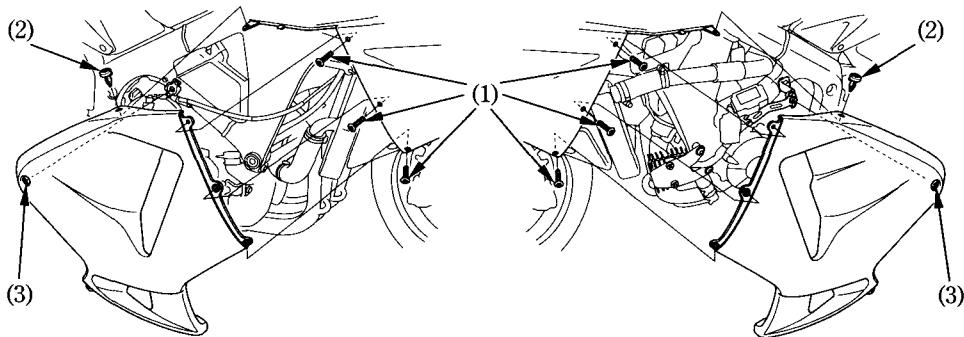

(1) Bolts

(2) Clips A

(3) Screws

Installation:

- Installation can be done in the reverse order of removal.