/	FREQUENCY		WHICHEVER → COMES		ODOMETER READING [NOTE (1)]							
ļ]:	FIRST	\times 1,000 km	1	6	12	18	24	30	36	REFER
	_	<u> </u>		\times 1,000 mi	0.6	4	8	12	16	20	24	TO
IT	EM		NOTE	MONTH		6	12	18	24	30	36	PAGE
*	FUEL LINE						I		I		I	
*	THROTTLE OPERATION						I		I		I	105
*	AIR CLEANER	1	NOTE (2)					I			I	
	SPARK PLUGS				EVERY 24,000 km (16,000 mi) I, 100							
					EVERY 48,000 km (32,000 mi) R							
*	VALVE CLEARANCE								I			_
	ENGINE OIL				R		R		R		R	93
	ENGINE OIL FILTER				R		R		R		R	96
*	ENGINE IDLE SPEED				I	I	I	I	I	I	I	106
Г	RADIATOR COOLANT		NOTE (3)				I		I		R	107
*	COOLING SYSTEM						I		I		I	
*	SECONDARY AIR SUPPLY	SYSTEM							I		I	