

MIDDLE COWL

The middle cowl must be removed to service the spark plugs.


The right and left middle cowls can be removed in the same manner.

Removal:

1. Remove the bolts (1).
2. Remove the clip A (2) and clips B (3).
3. Remove the middle cowl (4) and disconnect the front turn signal connector (5).
 - Be careful not to apply weight to the middle cowl.
 - Carefully release the each tabs.

Installation:

- Installation can be done in the reverse order of removal.

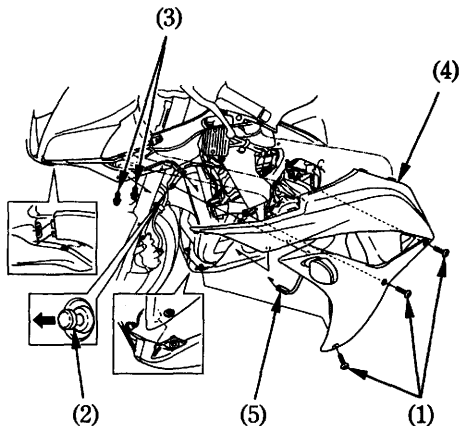

- | | |
|-------------|---------------------------------|
| (1) Bolts | (4) Middle cowl |
| (2) Clip A | (5) Front turn signal connector |
| (3) Clips B | |