

17. Reinstall the ignition coils.
18. Connect the ignition coil connectors to the ignition coils as before removal.
19. Install the remaining parts in the reverse order of removal.