



### Tachometer

#### NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

### Speedometer

#### Fuel gauge


Remaining fuel when only 1st (E) segment starts flashing:  
approximately 4.0 litres (1.1 US gal,  
0.9 Imp gal)



At the same time, the display switches to the reserve fuel consumption.

➡ P.25

If the fuel gauge indicators repeat flashing or turned off: ➡ P.86

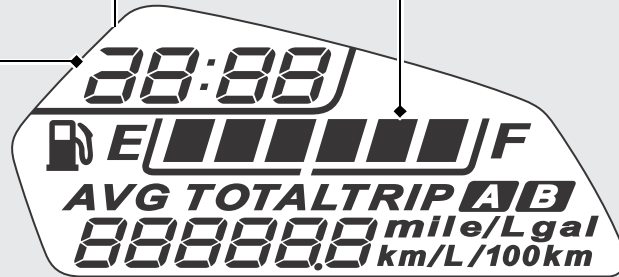

Clock (12-hour or 24-hour display)

To set the clock: ➡ P.27