

Instruments (Continued)

5 Setting of HISS indicator:

You can select the blink or off the HISS indicator.

- 1 Press **SEL** button to select "On" (blinks) or "OFF" (off).



- 2 Press **SET** button. The HISS indicator setting is set, and then the display moves to the changing of the speed and mileage unit.

6 Changing of speed and mileage unit:

- 1 Press **SEL** button to select either "km/h" and "km" or "mph" and "mile".
- 2 Press **SET** button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.

