


### Low Oil Pressure Information

The low oil pressure indicator (1) goes on and the red information indicator (2) lights when engine oil pressure is below the normal operating range.

Both indicator should go on when ignition switch is ON and engine is not running. Both should go off when the engine starts, except for occasional flickering at or near idling speed when the engine is warm.

#### CAUTION:

**\* Running the engine with insufficient oil pressure may cause serious engine damage.**

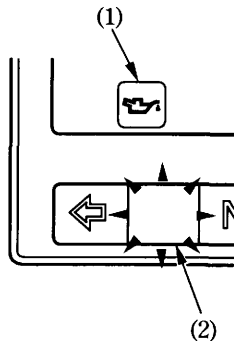

- (1) Low oil pressure indicator
- (2) Information indicator