



- To set the hour, set the clock in the hour adjust mode and press the right control button until the desired hour and AM/PM are displayed.

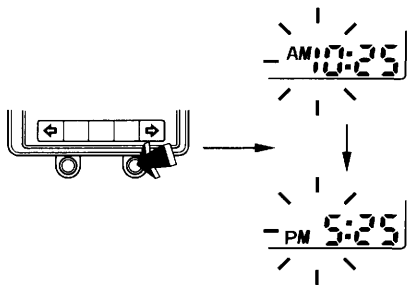

- To set the minute, set the clock in the minute adjust mode and press the right control button until the desired minute is displayed. The minute display will return to “00” when “60” is reached without affecting the hour display.

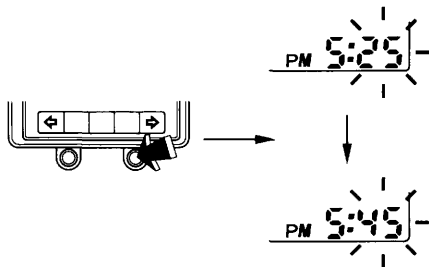

4. Wait approximately 10 seconds; the display will stop flashing automatically. Adjustment will be cancelled when the ignition switch is turned OFF while the clock is in the adjust mode.