

OPERATION

page

| | |
|----|--|
| 1 | MOTORCYCLE SAFETY |
| 1 | Important Safety Information |
| 2 | Protective Apparel |
| 4 | Load Limits and Guidelines |
| 8 | PARTS LOCATION |
| 11 | Instruments and Indicators |
| 29 | MAJOR COMPONENTS (Information you need to operate this motorcycle) |
| 29 | Suspension |
| 35 | Brakes |
| 38 | Clutch |
| 40 | Coolant |
| 42 | Fuel |
| 45 | Engine Oil |
| 46 | Tubeless Tyres |

page

| | |
|----|---|
| 52 | ESSENTIAL INDIVIDUAL COMPONENTS |
| 52 | Ignition Switch |
| 53 | Keys |
| 55 | Immobilizer System (HISS) < Except MX, BR type > |
| 58 | Right Handlebar Controls |
| 59 | Left Handlebar Controls |