

Speedometer/Odometer/Tripmeter/ Fuel Mileage Meter/Speed, Mileage and Fuel Mileage Unit Change

Speedometer

Shows riding speed.

Odometer


Shows accumulated mileage.

Tripmeter

Shows mileage per trip.

There are two tripmeters, tripmeter A (5) and tripmeter B (6). Switch between the A and B displays by pressing the left control button (7) repeatedly.

To reset the tripmeter, push and hold the left control button with the display in the tripmeter A or tripmeter B mode.

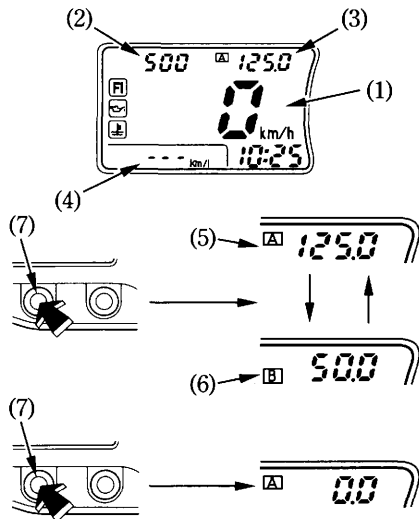

- (1) Speedometer
- (2) Odometer
- (3) Tripmeter
- (4) Fuel mileage meter
- (5) Tripmeter A
- (6) Tripmeter B
- (7) Left control button