 


| (Ref.No.) Description | Function |
|---|---|
| (4) Coolant temperature meter | Shows coolant temperature (page 28). This meter shows the initial display (page 18). |
| (5) Immobilizer system (HISS) indicator (red) | <p>Except MX , BR type: This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 55).</p> <p>When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 56).</p> |