

Initial Display

When the ignition switch is turned ON, the multi-function display (1) and coolant temperature meter (2) will temporarily show all the modes and digital segments so that you can make sure the liquid crystal display is functioning properly.


The fuel mileage meter (3) will be displayed except for MX and BR types.

The unit "mph" (4) and "mile/l" (5) will be displayed only for E type.

The unit "l/100 km" (6) will be displayed only for G type.

The unit "km/l" (7) will be displayed except for G type.

Digital clock (8) and tripmeter (9) will reset if the battery is disconnected.

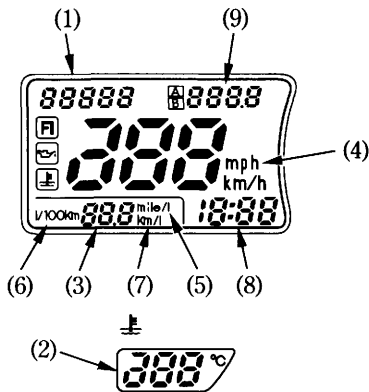

- (1) Multi-function display
- (2) Coolant temperature meter
- (3) Fuel mileage meter
- (4) "mph"
- (5) "mile/l"
- (6) "l/100km"
- (7) "km/l"
- (8) Digital clock
- (9) Tripmeter