



- To set the hour, set the clock in the hour adjust mode and press the right control button.

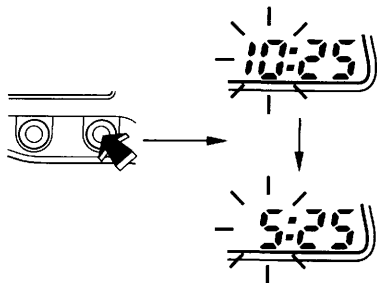

- To set the minute, set the clock in the minute adjust mode and press the right control button until the desired minute is displayed. The minute display will return to "00" when "60" is reached without affecting the hour display.

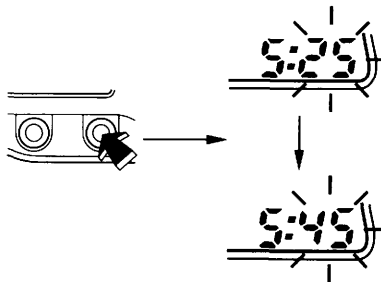

4. Wait approximately 10 seconds; the display will stop flashing automatically. If the ignition switch is turned off during the time adjustment mode, the time adjustment will become invalid. At the same time, the blinking function of the immobilizer system (HISS) indicator will be altered.