


## LOWER FAIRING

### Removal:

1. Remove the middle fairing. ( page 47)
2. Remove the bolts (4).
3. Remove the lower fairing (5).

### Installation:

1. Installation can be done in the reverse order of removal.

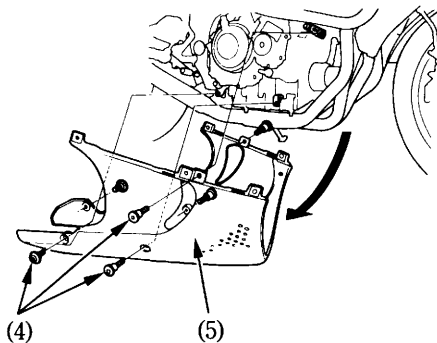

(4) Bolts

(5) Lower fairing