

## WHEEL REMOVAL

(Refer to the maintenance precautions on page 67 ).

### NOTE:


- \* This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

### CAUTION:

- \* **To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.**

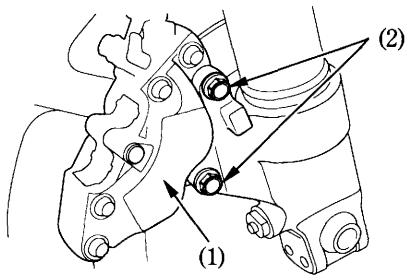

- (1) Brake caliper assembly
- (2) Fixing bolts