

(Ref. No.) Description	Function
(4) Immobilizer system (HISS) indicator	This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at ○ (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start. (page 48)
(5) Coolant temperature meter	Shows coolant temperature (page 19).
(6) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(7) High beam indicator (blue)	Light when the headlight is on high beam.