


LOWER FAIRING

Removal:

1. Remove the middle fairing. (page 58)
2. Remove the bolts A (1).
3. Remove the bolts B (2).

Installation:

1. Installation can be done in the reverse order of removal.
 - Run the tubes through the clip of the lower fairing.

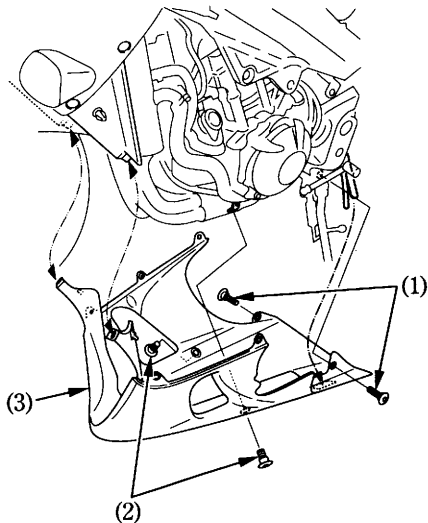

(1) Bolts A
(2) Bolts B

(3) Lower fairing