

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ →	ODOMETER READING [NOTE (3)]							PAGE
			1,000 km (600 mi)	6,400 km (4,000 mi)	12,800 km (8,000 mi)	19,200 km (12,000 mi)	25,600 km (16,000 mi)	32,000 km (20,000 mi)	38,400 km (24,000 mi)	
* FINAL DRIVE OIL	EVERY				I		I		R	124
BATTERY	MONTH		I	I	I	I	I	I	I	164
BRAKE FLUID (FRONT)	MONTH 1 2 YEARS *R		I	I	I	*R	I	I	*R	142
BRAKE SHOE/PAD WEAR				I	I	I	I	I	I	144
BRAKE SYSTEM			I	I	I	I	I	I	I	142
* BRAKE LIGHT SWITCH			I	I	I	I	I	I	I	172
* HEADLIGHT AIM			I	I	I	I	I	I	I	
CLUTCH FLUID	MONTH 1 2 YEARS *R		I	I	I	*R	I	I	*R	138
CLUTCH SYSTEM			I	I	I	I	I	I	I	138
SIDE STAND				I	I	I	I	I	I	150
* SUSPENSION			I	I	I	I	I	I	I	150
* NUTS, BOLTS, FASTENERS			I	I	I	I	I	I	I	
** WHEELS			I	I	I	I	I	I	I	
** STEERING HEAD BEARING			I		I		I		I	

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

- NOTES: (1) Service more frequently when riding in dusty areas.
 (2) Service more frequently when riding in rain, or at fully throttle.
 (3) For higher odometer reading, repeat at the frequency interval established here.