

Controls & Features


Seat Lock

The seat lock is in the ignition switch on the right side below the handlebar.

To open the seat, insert the ignition key (1) and push in the position of SEAT to unlock.

To lock the seat, lower and push down on it until it locks. Make sure the seat is securely closed before riding.

BELOW HANDLEBAR

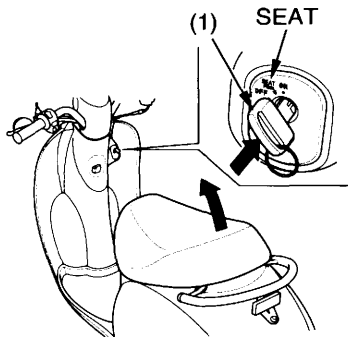

(1) ignition key