

Center Stand Lock

Set the stand lock when the scooter is on its center stand.


To Lock the Center Stand

1. Place the scooter on its center stand and open the seat (page 26).
2. Turn the lock lever (1) to "LOCK."
3. Lower and push down on the seat until it locks.

To Unlock the Center Stand

Turning the lock lever from "LOCK" to "UNLOCK" unlocks the center stand.

UNDER SEAT

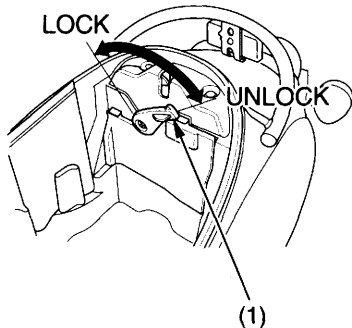

(1) lock lever