

Starting & Stopping the Engine

Starting Procedure

1. Place the scooter on its center stand.
2. Lock the rear wheel by squeezing the rear brake lever (1) and setting the brake lock lever (2).


⚠ CAUTION

Contact with the spinning rear wheel can cause you to be hurt.

Set the parking brake when the scooter is on its center stand.

The electric starter will only work when the brake lever is pulled in.

LEFT HANDLEBAR

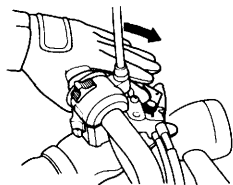

- (1) rear brake lever
(2) brake lock lever