

## Engine Oil & Strainer Screen

5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 143).

### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

6. Check the condition of the sealing washer on the engine oil drain bolt. Replace the washer every other time the oil is changed.  
Install the engine oil drain bolt and tighten it to the specified torque:  
18 lbf·ft (24 N·m , 2.4 kgf·m)
7. Fill the crankcase with the recommended oil (page 91 ), approximately:  
0.6 US qt (0.6 ℓ)

8. Install the oil filler cap/dipstick securely.
9. Lock the rear wheel (page 24 ).
10. Start the engine and let it idle for 3–5 minutes.
11. Stop the engine and wait 2–3 minutes.
12. Check that the oil level is at the upper level mark on the oil filler cap/dipstick (page 94 ).
13. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.