


# Air Cleaner

## Replacement


1. Remove the tapping screws (1) and remove the air cleaner housing cover (2).

LEFT SIDE

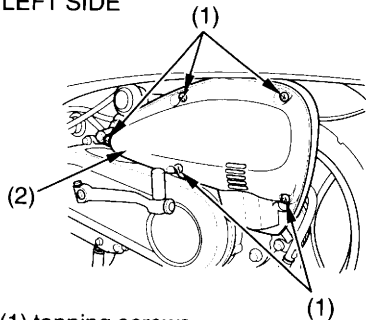

- (1) tapping screws  
(2) air cleaner housing cover

LEFT SIDE

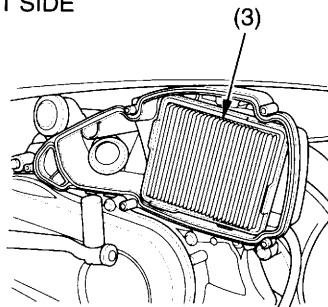

(3) air cleaner

2. Remove the air cleaner (3).
3. Discard the air cleaner.
4. Install a new air cleaner.
5. Install the removed parts in reverse order of removal.