


## Brake Shoe Wear

Refer to *Safety Precautions* on page 70 .


The front and rear brakes are equipped with external brake wear indicators that let you check brake wear without disassembly. Application of the brake control causes the arrow on the brake arm to move toward a reference mark on the brake panel.

### LEFT FRONT

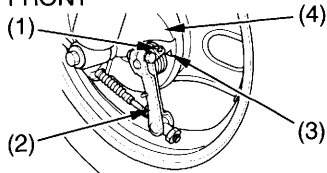

- (1) arrow                      (3) reference mark  
(2) brake arm                (4) brake panel

### LEFT REAR

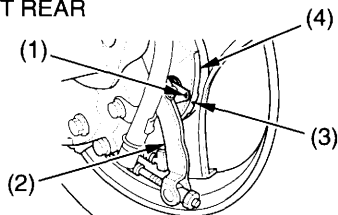

- (1) arrow                      (3) reference mark  
(2) brake arm                (4) brake panel

1. Place your scooter on its center stand.
2. Apply the brake and check the movement of the arrow (1) on the brake arm (2). Replace the brake shoes if the arrow aligns with the reference mark (3) on the brake panel (4) upon full application of the brake. If replacement is necessary, see your Honda dealer.