


Vehicle Identification

Serial Numbers

The VIN and engine serial numbers are required when you register your scooter. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (vehicle identification number) is stamped on the top of the framebody and also appears on the Safety Certification Label attached inside the leg shield.

INSIDE LEG SHIELD

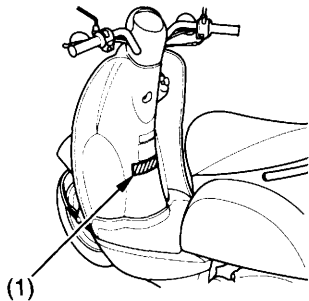

(1) VIN