

## Gauges & Indicators

---

### Lamp Check

When applicable, the high beam indicator comes on when you turn the ignition switch ON and remains on until you select the low beam.

If this indicator does not come on when it should, have your Honda dealer check for a burned-out bulb or other problems.