


Maintenance Lid Removal

Refer to *Safety Precautions* on page 70 .

The maintenance lid must be removed to service the coolant, fuse and battery.

UNDER SEAT

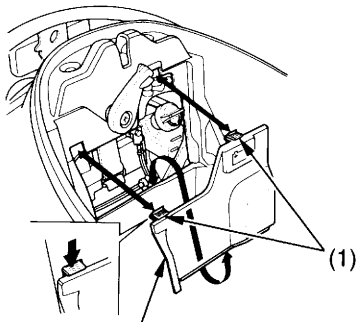

(1) tabs

(2)

(2) maintenance lid

Removal

1. Open the seat (page 26).
2. Release the tabs (1), then remove the maintenance lid (2).

Installation

- Installation can be done in the reverse order of removal.